


**FIG. 1**

FIG. 2 System Sj

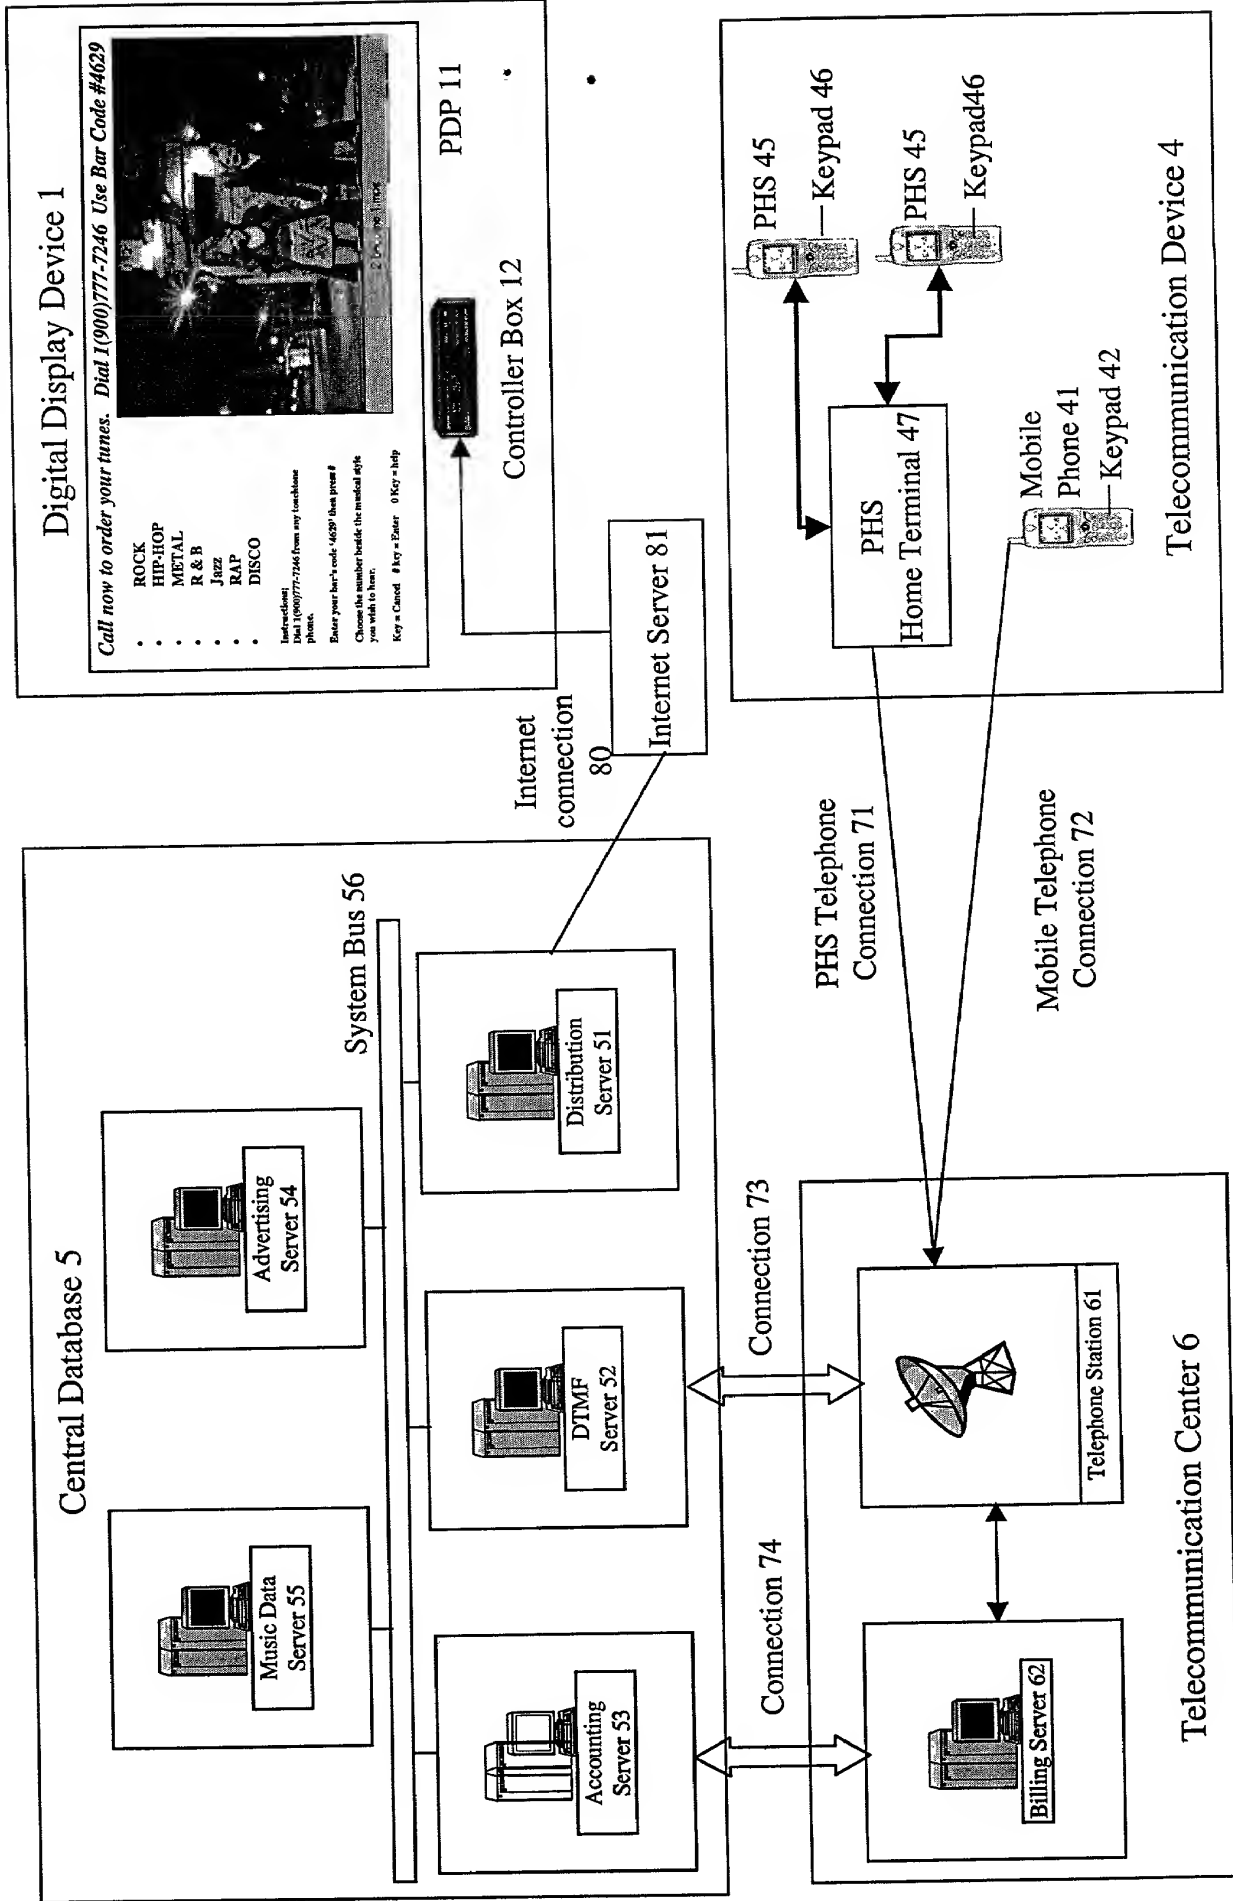

Third party charge phone number 21

Bar code 22

Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629

- 1.ROCK
- 2.HIP-HOP
- 3.METAL
- 4.R&B
- 5.JAZZ
- 6.RAP
- 7.DISCO

Navigation  
menu 23

Instructions;  
Dial 1(900)777-7246 from any  
touchtone phone.

Enter your bar's code '4629' then press #

Choose the number beside the musical  
style you wish to hear.

Key = Cancel # key = Enter 0 Key = help

202

201



Music Video Clip 24

203

PDP11

FIG. 3 JUKEBOX MODE

Third party charge phone number 21 Bar code 22

Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629

1. ROCK
2. HIP-HOP
3. METAL
4. R&B
5. JAZZ
6. RAP
7. DISCO

Navigation  
menu 23

Instructions;  
Dial 1(900)777-7246 from any  
touchtone phone.

Enter your bar's code '4629' then press #




Choose the number beside the musical  
style you wish to hear.

Key = Cancel # key = Enter 0 Key = help

—212

211

Advertisement25

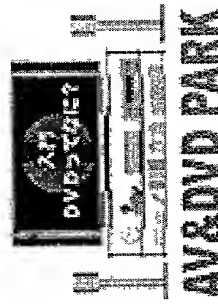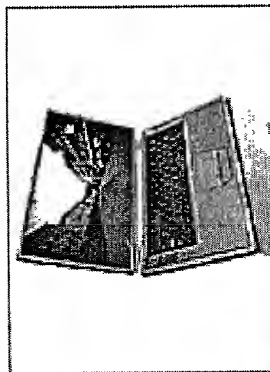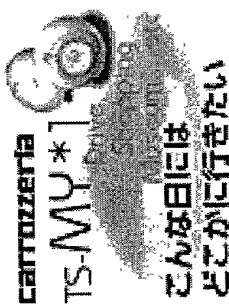

213

PDP11

FIG. 4 COMMERCIAL MODE

Third party charge phone number 21


Bar code 22

*Call now to order your tunes. Dial 1(900)777-XXXX Use Bar Code #4629*

- 1. ROCK** Instructions;  
Dial 1(900)777-7246 from  
**2. HIP-HOP** any touchtone phone.  
**3. METAL** Enter your bar's code '4629'  
then press #  
**4. R&B** Choose the number beside  
the musical style you wish to  
hear.  
**5. JAZZ** •Key = Cancel  
**6. RAP** •# key = Enter  
**7. DISCO** •0 Key = help  
Navigation  
menu 23



Music Video Clip 24

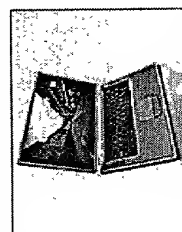

Advertisement 25



224

PDP11

**FIG. 5** MIX MODE


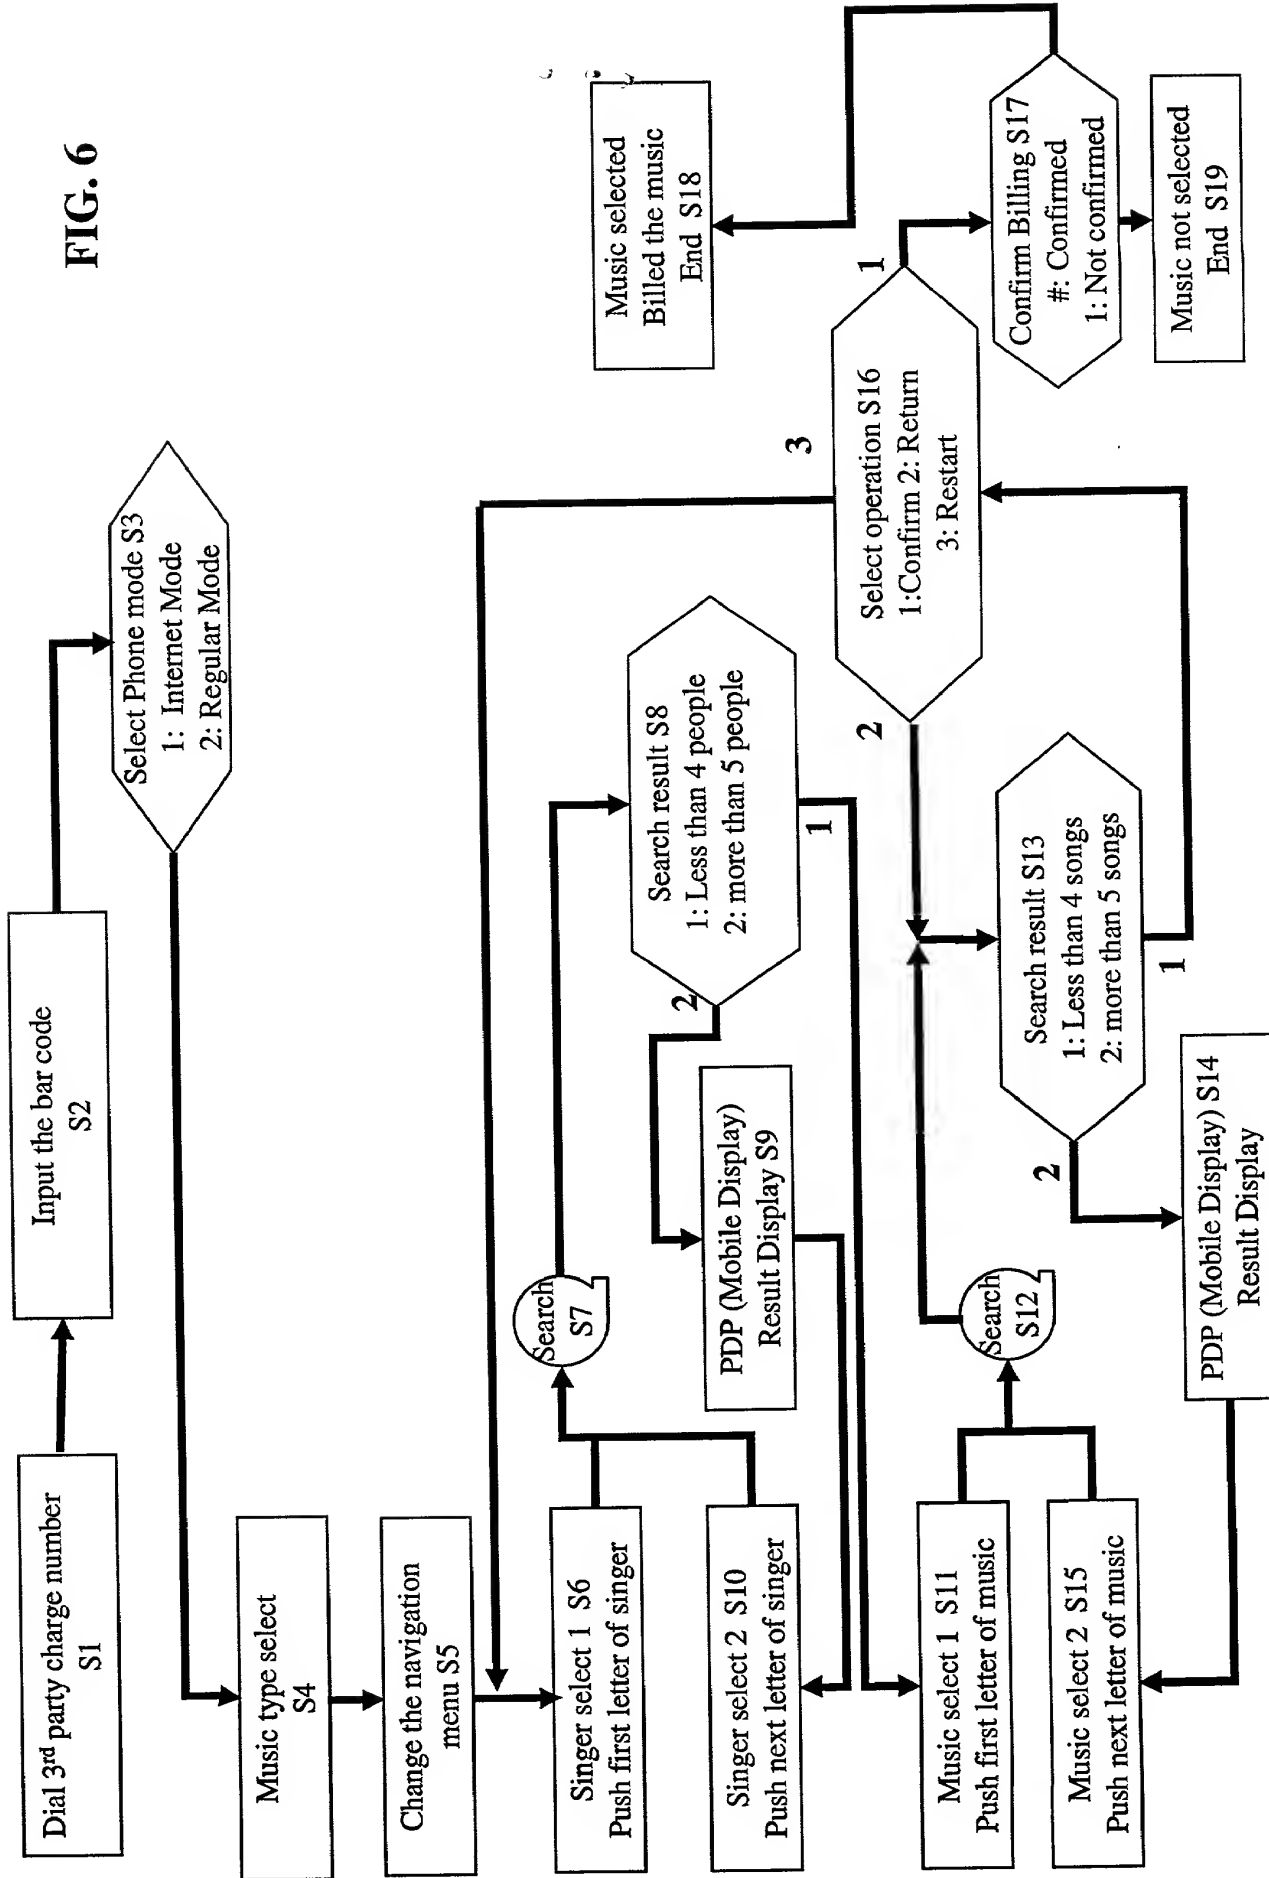


FIG. 7



# System Sc

FIG. 8

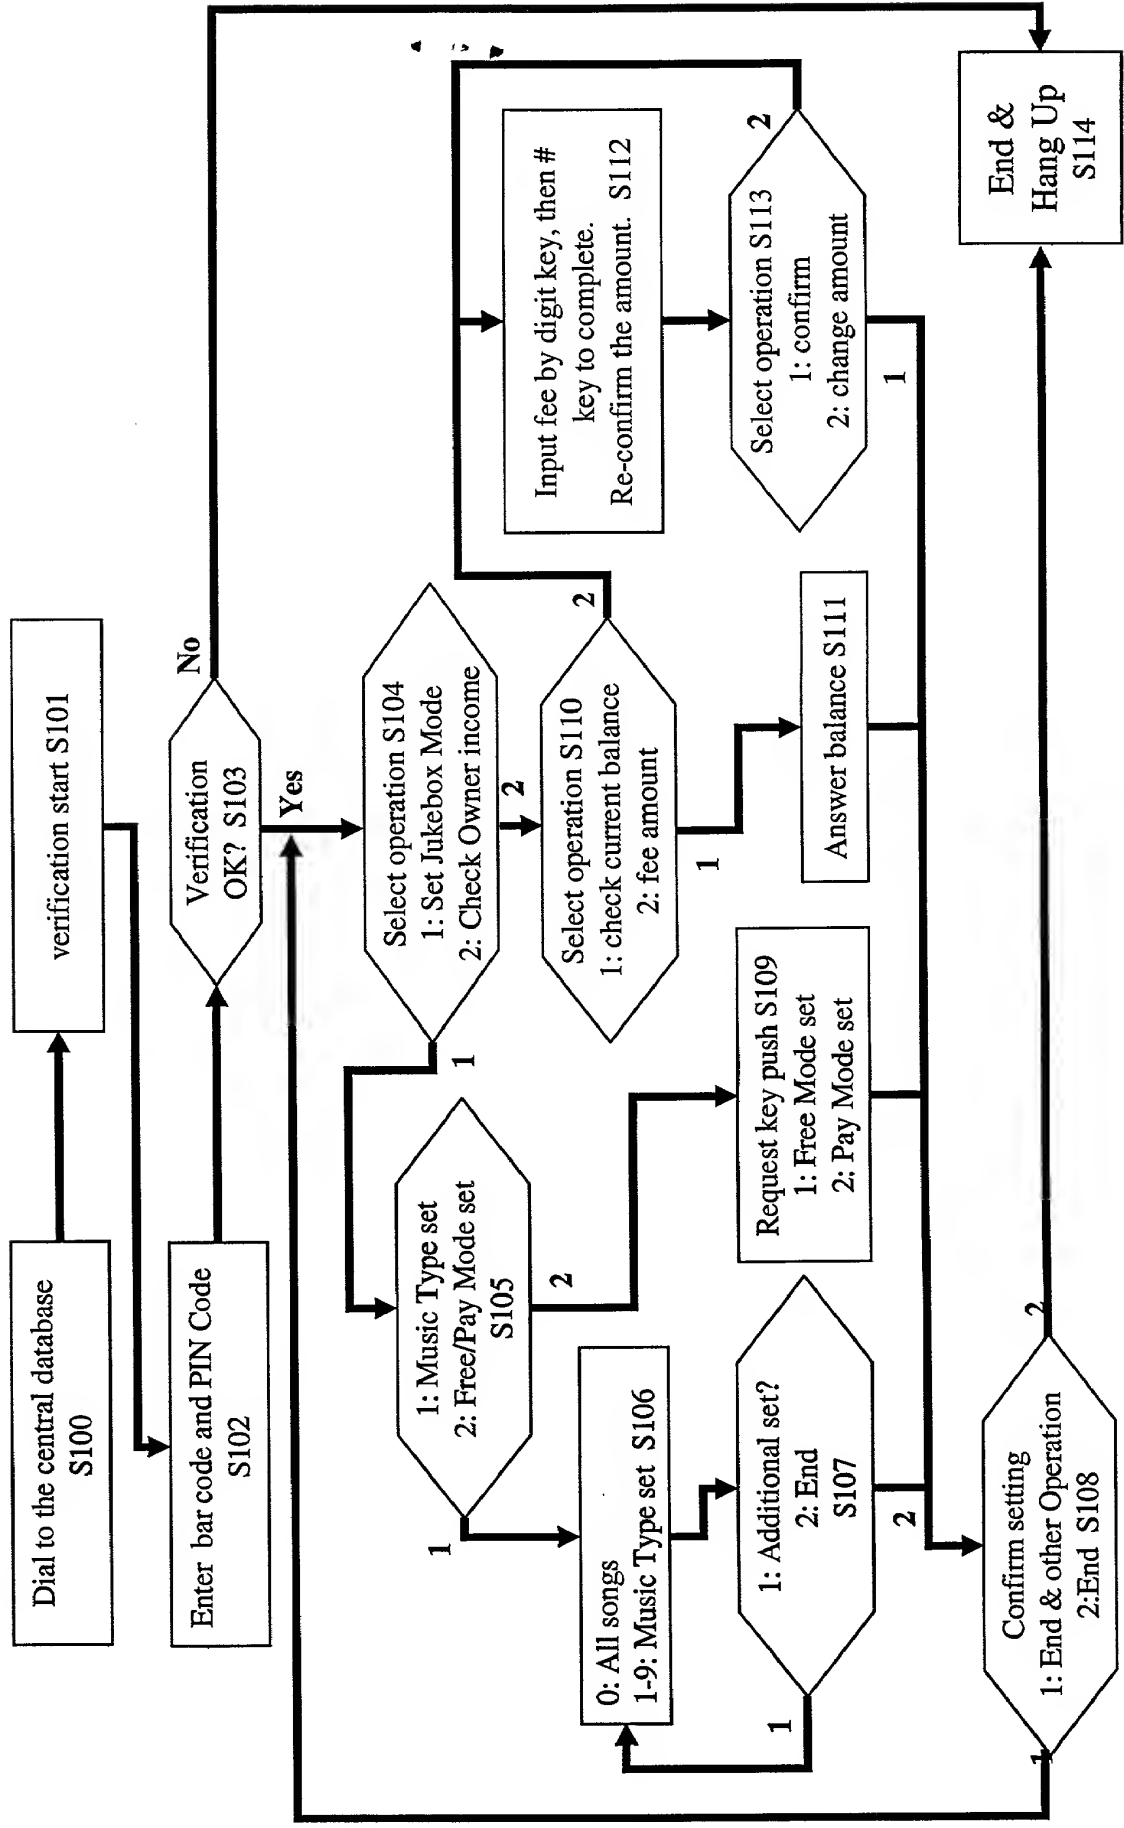